


edington water feature kit manual



OVERALL PRODUCT DIMENSIONS

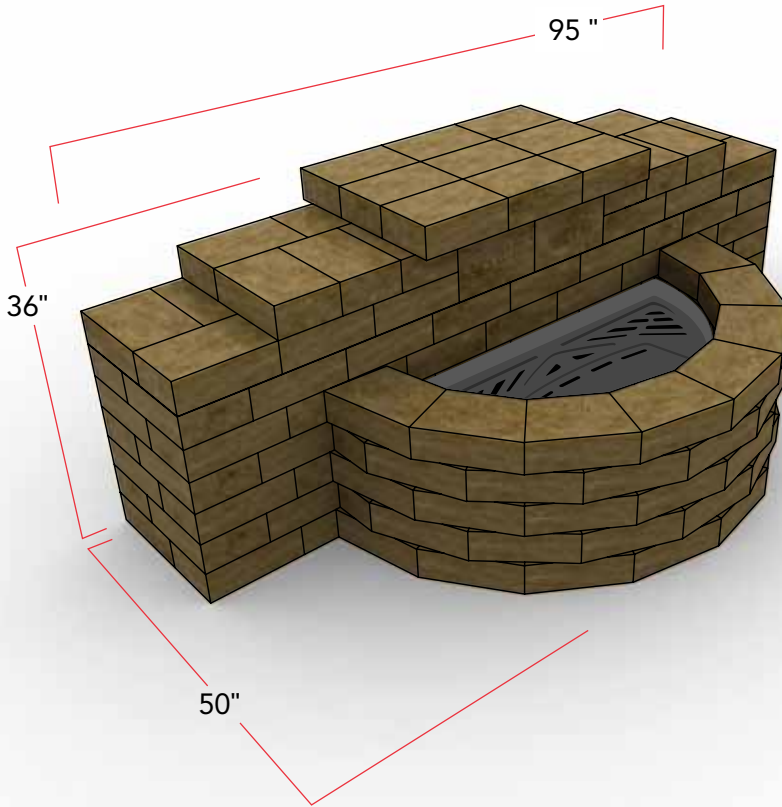

All measurements are approximate. Due to the manufacturing process used to give the weathered appearance to the Edington wall stones, there may be some slight variations in the measurements of individual units

CALL BEFORE YOU DIG

Before you plan your project, be sure to find out about zoning requirements in your area, along with rules for excavating and building. Whether your project is large or small, you should obtain all required permits before you begin your project.

Call 811 before you dig. Every digging job requires a call—even small projects like planting trees and shrubs. The depth of utility lines varies and there may be multiple utility lines in a common area. Digging without calling can disrupt service to an entire neighborhood, harm you and those around you and potentially result in fines and repair costs. Calling 811, a federally mandated call-before-you-dig number, before every digging job gets your underground utility lines marked for FREE and helps prevent undesired consequences.



colors



Canyon Creek Blend



Earthstone Blend



Fieldstone Blend



Flagstone Blend



Sierrastone Blend



Quarrystone Blend

Due to variations in printing, color selections should always be chosen from actual product samples.

materials list

- Check to make sure everything has shipped for installation of kit


MATERIALS LIST	
Item	Qty
Edington Standard Unit	149
Edington Wedge Unit	40
Tubes Paver Bond Adhesive	12
24" Colorfalls Kit	1

The information, including technical data, figures, tables, designs, drawings, details, suggested procedures and suggested specifications, presented in this publication is for general information only. While every effort has been made to ensure its accuracy, this information should not be used or relied upon for any application without verification of accuracy, suitability, and applicability for the use contemplated, which is the sole responsibility of the user. A final, project-specific design should be prepared by a qualified, licensed, professional based on actual site conditions. Oberfields LLC disclaims any and all express or implied warranties of merchantability fitness for any general or particular purpose, trademark or copyright in regard to information or products contained or referred to herein.

This assembly guide is intended for use only with the Oberfields Edington Wall Stone® Waterfall Kit. Use with substitute products is strictly prohibited without prior written approval from Oberfields LLC.

base/foundation installation

- Manufacturer recommended installation on minimum 12" compacted, crushed aggregate or 6" concrete pad with 36" deep footings.*

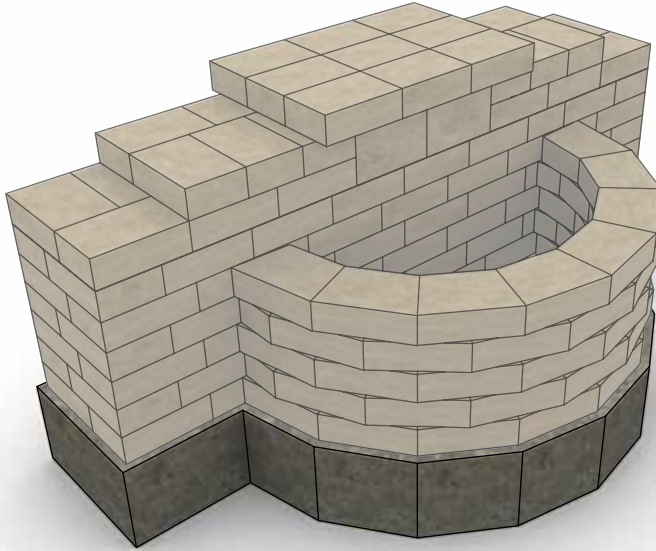

Disclaimer: Your circumstances, or specific project parameters may require a different base installation. *Check local building codes and/or city/municipality requirements.



The total weight of the feature, with water in the basin and planters on shelves, will be nearly 6,000 lbs. Please plan your base accordingly.

MATERIALS LIST

Item	Qty
54" x 99" concrete footer	1
OR	
54" x 99" crushed aggregate footer	1

step I

- Layout of Edington units as shown.
- If using concrete as your base, secure each Edington unit with a 1/4" bead of Paver Bond adhesive.
- Refer to Colorfalls literature for step-by-step instructions for Colorfalls unit.

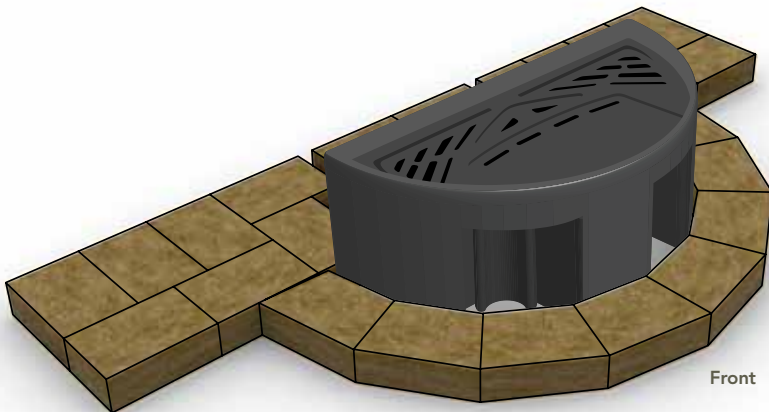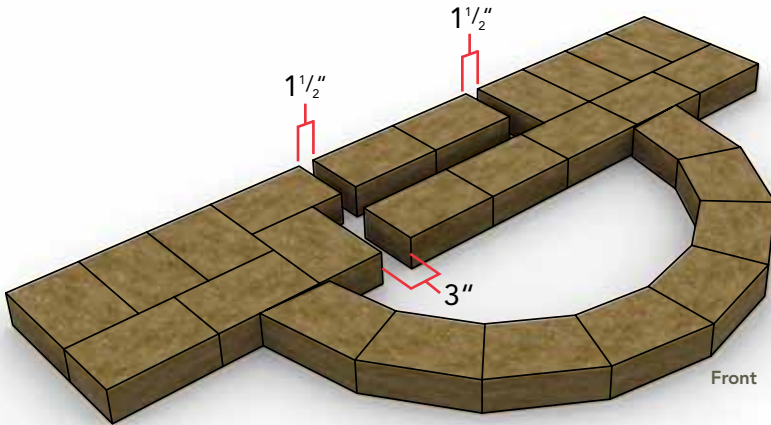

(2) voids in back wall are for electrical cord outlet and should be approx. 1 1/2" each.

Void in wall nearest basin should be approx. 3" to accommodate plumbing from basin to colorfalls weir.



Attach pipe to basin and lay plumbing pipe in void to assure clearance. Voids can be made slightly wider if needed, but this will cause base course to extend out beyond successive courses on sides.

MATERIALS LIST

Item	Qty
Full Edington Standard units	18
Full Edington Wedge units	8

step 2

- Layout of Edington units as shown.
- Cut or split one wedge unit in half and use half units to alternate bond on courses.
- Secure each Edington unit with a 1/4" bead of Paver Bond adhesive.

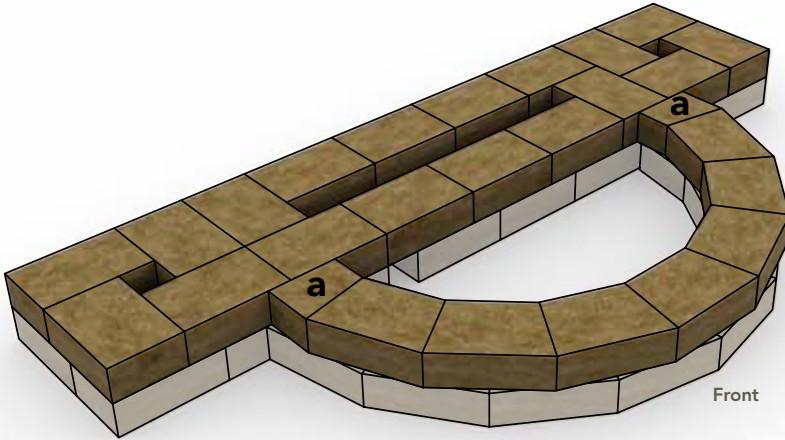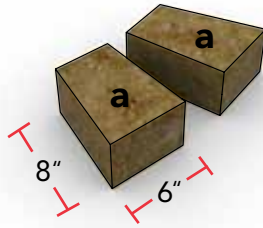


MATERIALS LIST

Item	Qty
Edington Full units	18
Full Edington Wedge units	7
Cut Edington Wedge units	2

step 3

- Layout of Edington units as shown.
- Secure each Edington unit with a 1/4" bead of Paver Bond adhesive.


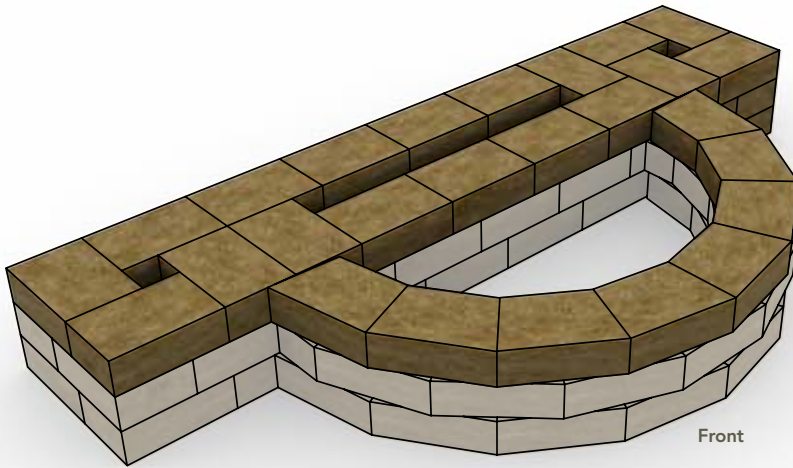


MATERIALS LIST

Item	Qty
Full Edington units	18
Edington Wedge units	8

step 4

- Layout of Edington units as shown.
- Cut or split one wedge unit in half and use half units to alternate bond on courses.
- Secure each Edington unit with a 1/4" bead of Paver Bond adhesive.

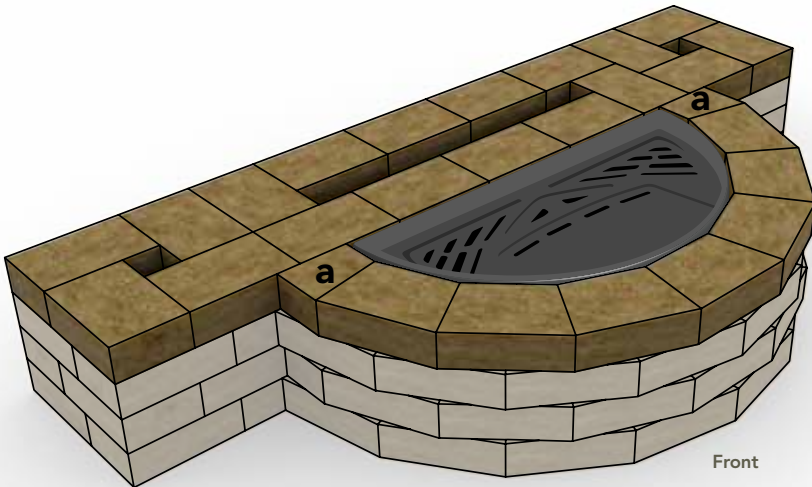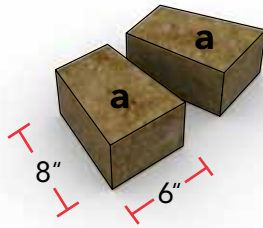


MATERIALS LIST

Item	Qty
Full Edington units	18
Full Edington Wedge units	7
Cut Edington Wedge units	2

step 5

- Layout of Edington units as shown.
- Secure each Edington unit with a 1/4" bead of Paver Bond adhesive.

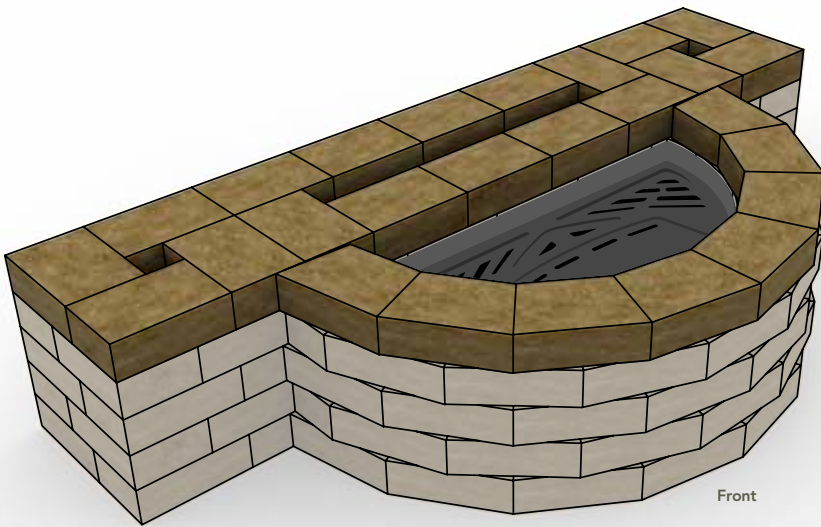


MATERIALS LIST

Item	Qty
Full Edington units	18
Edington Wedge units	8

step 6

- Layout of Edington units as shown.
- Secure each Edington unit with a 1/4" bead of Paver Bond adhesive.


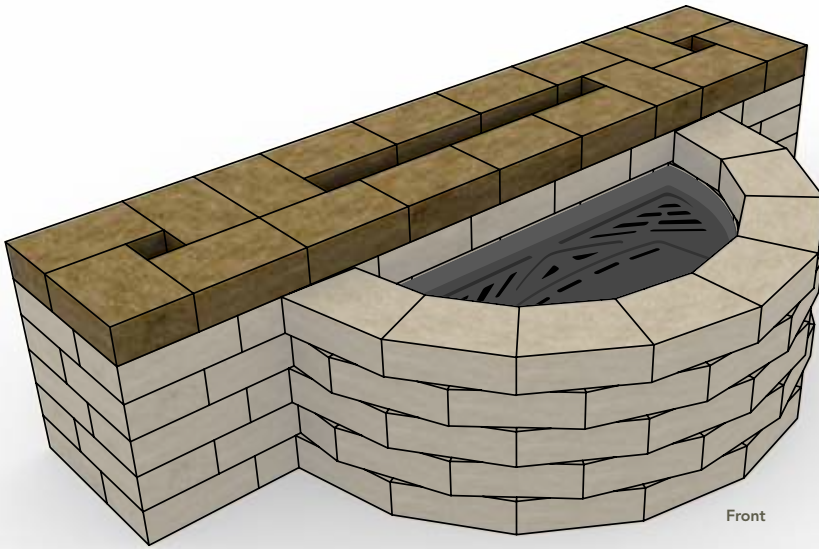


MATERIALS LIST


Item	Qty
Full Edington units	18

step 7

- Layout of Edington units as shown.
- Cut (2) units to 4 1/8" ht. and cut (2) units to 7 3/8" ht.
- Install Colorfalls weir and attach plumbing pipe at this point.
- Secure each Edington unit with a 1/4" bead of Paver Bond adhesive.

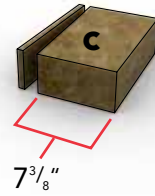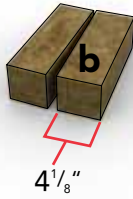

Note both b blocks sit behind c blocks



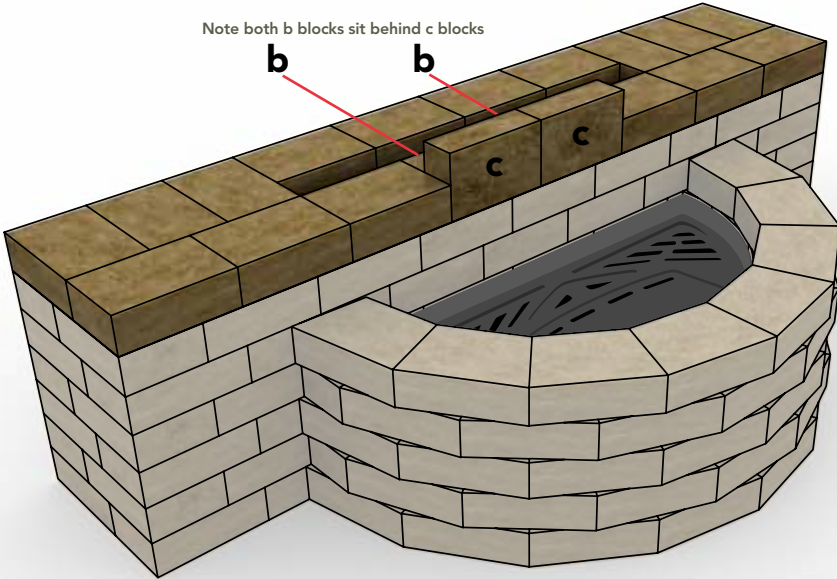


MATERIALS LIST

Item	Qty
Full Edington units	16
Edington Standard units cut to 4 1/8" height	2
Full Edington units cut to 7 3/8" height	2

step 8

- Layout of Edington units as shown.
- Assure minimum $1/2''$ clearance for weir lip and $3\ 3/4''$ for unit body. Shims can be used to level unit from side to side and front to back as needed.
- Secure each Edington unit with a $1/4''$ bead of Paver Bond adhesive.

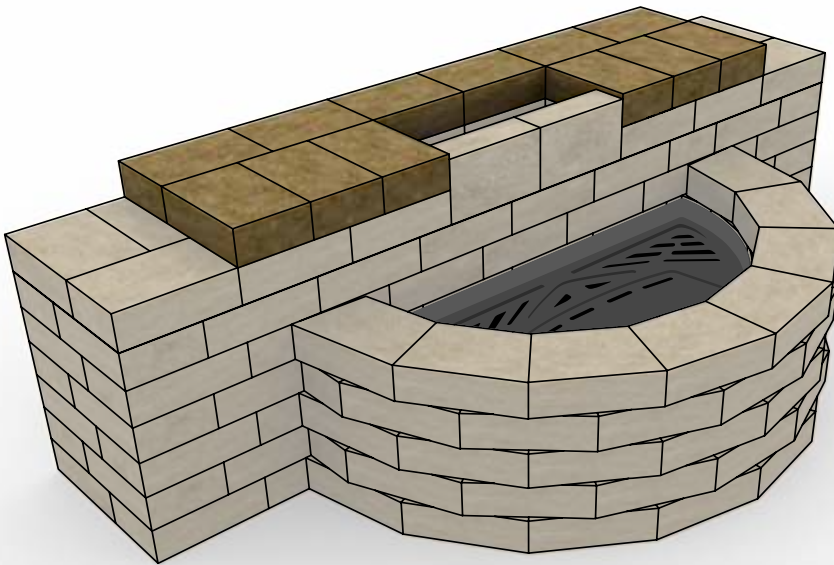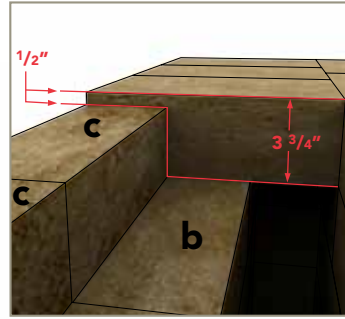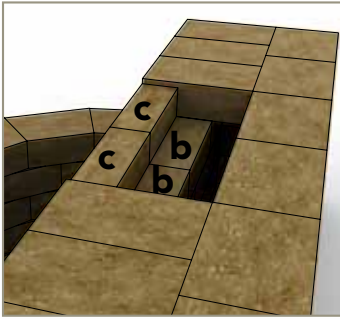


MATERIALS LIST

Item	Qty
Full Edington units	12

step 9

- Layout of Edington units as shown.
- Install top course. Now the (5) shelves created can be used to display planters (not included).
- Secure each Edington unit with a 1/4" bead of Paver Bond adhesive.

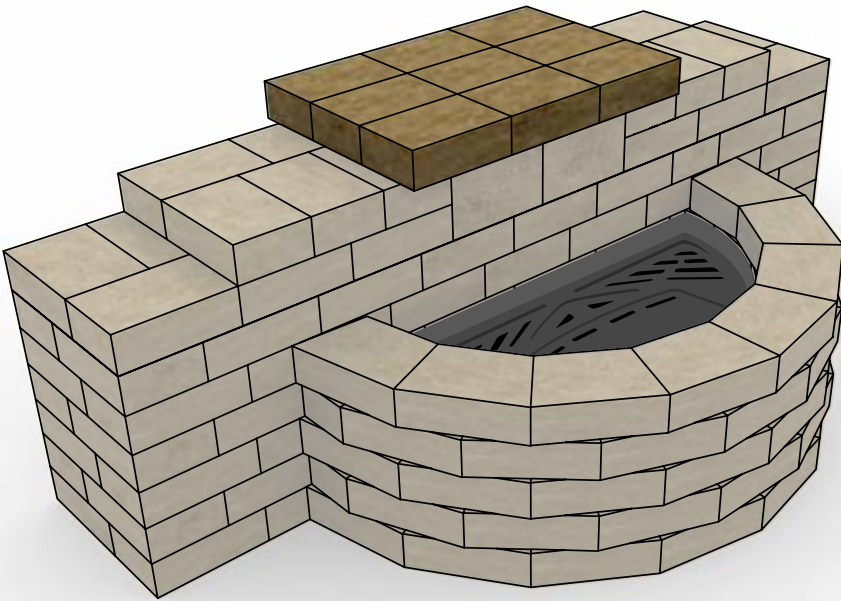

MATERIALS LIST	
Item	Qty
Full Edington units	9

other edington kits



EDINGTON® FIREPLACE KIT

Let OBERFIELDS take the stress out of fireplace construction with our Edington Fireplace Kit. Our 10-step construction process takes away the apprehensiveness of fireplace construction and provides a durable and long-lasting fireplace that will complement any outdoor living space. This Fireplace Kit ships with everything required to construct a fully functioning fireplace, at a fraction of the cost of other custom fireplaces. Our Kit provides a beautiful but basic fireplace that can be used as is, or can be further customized to meet your needs..

OVERALL DIMENSIONS

98" H x 60" W x 52" D



EDINGTON FIRE PIT KIT

Build a fire pit in no time, with our Edington Fire Pit Kit. Place base units on 4-6" of prepared compacted base and adhere units as you construct. Kit comes with a steel metal ring. Great for small fires, roasting marshmallows, hot dogs and more.

OVERALL DIMENSIONS

16" tall, 32" inside diameter,
48" outside diameter



PUB TABLE KIT

Pull up a chair and enjoy the newest Pub Table Kit from OBERFIELDS. The large table top allows plenty of room to enjoy drinks or a snack and features a 2" hole, perfect for an umbrella, while the bottom foot rest is great for propping up your feet. We've chosen to stock four of our Edington Wall Stone colors to compliment your outdoor living space!

OVERALL DIMENSIONS

42" H x 42" W x 42" D



614-252-0955 Columbus
740-369-7644 Delaware
937-885-3711 Dayton
419-225-6761 Lima
800-845-7644
Fax 740-363-7644
oberfields.com



oberfields.com